[Technical Data]
Basis of Fitting Selection / Dimensional Tolerances and Fitting

Drawing Manual in JIS (How To Use) Series **Excerpted and edited from JIS B0401-1, -2 (1998)**

			H6	H7	H8	H9	Applicable Part	Functional Classification		Application Example
Can be Moved Relatively	Clearance Fit	Loose Fit				c9	Part which accommodates a wide gap or movable part which needs a gap. Part which accommodates a wide gap to facilitate assembling. Part which needs an appropriate gap even at a high temperature.	Part whose structure needs a gap. {Inflates. Large position error {Fitting length is long.		Piston Ring and the Ring Groove Fitting by means of a loose set pin.
		Light Roll Fit			d9	d9	Part which accommodates or needs a gap.	Cost needs to be reduced. {Manufacturing Cost {Maintenance Cost		Crank Web and Pin Bearing(Side) Exhaust Valve Box and the Sliding Part of a Spring Bearing Piston Ring and the Ring Groove
				e7	e8	e9	Part which accommodates a wide gap or needs a gap. Fairly wide gap, well greased bearing. Bearing subjected to a high temperature, high speed and heavy load (high-degree forced lubrication).	Regular Rotary or Sliding Part (Must be well greased.)		Fitting of the Exhaust Valve Box Main Bearing for the Crank Shaft Regular Sliding Part
		Roll Fit	f6	f7	f7 f8		Fitting so as to provide an appropriate gap to permit movement (high-quality fitting). Regular normal temperature bearing lubricated with grease or oil.	Regular Fitting (Often comes apart.)		Part in which a cooled exhaust valve box is inserted. Regular Shaft and Bushing Link Device Lever and Bushing
		Fine Roll Fit	g5	g6			Continuously revolving part of a precision machine under a light load. Fitting with a narrow gap so as to permit movement (spigot and positioning). Precision sliding part.	Part required to make a precision motion with virtually no play.		Link Device Pin and Lever Key and its Groove Precision Control Valve Rod
Cannot be Moved Relatively	Transition Fit	Sliding Fit	h5	h6	h7 h8	h9	Fitting so as to permit movement by hand, with a lubricant applied. (high-quality positioning) Special High Precision Sliding Part Unimportant Stationary Part	Can be disassembled, reassembled without damaging component parts.	Force cannot be transmitted by the fitting force alone.	Fitting a rim and a boss together Fitting the gear of a precision gear device
		Push Fit	h5 h6	js6			Fitting which accommodates a light gap. Precision fitting which locks both parts while the unit is used. Fitting which allows assembling and disassembling with a wooden or lead hammer.			Fitting Coupling Flanges Together Governor Path and Pin Fitting a Gear Rim and a Boss Together
		Driving Fit	js5	k6			Fitting which requires an iron hammer or hand press for assembling, disassembling (a key or the like is necessary to prevent inter-part shaft rotation). Precision positioning.			Fixing the Shaft of a Gear Pump and a Casing Together Reamer Bolts
			k5	m6			Same as the above for assembling and disassembling. Precision positioning which allows no gap.			Reamer Bolts Fixing the piston of hydraulic equipment and a shaft together Fitting a Coupling Flange and a Shaft Together
		Light Press Fit	m5	n6			Fitting which requires considerable force for assembling, disassembling. Precision stationary fitting (a key or the like is necessary for high torque transmission purposes)		Slight force can be transmitted by the fitting force alone.	Shaft of a Flexible Coupling and Gear(Passive Side) Precision Fitting Insertion of a Suction Valve and Valve Guide
	Interference Fit	Press Fit	n5 n6	p6			Fitting which requires much force for assembling, disassembling(a key or the like is necessary for high torque transmission). Light press fitting or the like is necessary for non-ferrous component parts. Standard press fitting is required for iron component parts and a bronze part and a copper part.	Hard to disassemble without damaging component parts.		Insertion of a Suction Valve and Valve Guide Fixing a Gear and a Shaft Together(Low Torque) Shaft of a Flexible Coupling and a Gear(Drive Side)
			p5	r6			Same as the above for assembling and disassembling Shrinkage press fitting, cold press fitting or forced press fitting is required for large component parts.			Coupling and Shaft
		Strong Press Fit, Shrinkage Fit, Freeze Fit		s6			Firmly coupled together and requires shrinkage press fitting, cold press fitting or forced press fitting. Permanent assembly, which can not be disassembled any further. Press fitting or the like is required for light alloy members.		Considerable force can be transmitted by the fitting force alone.	Attaching and Fixing a Bearing Bushing
			r5	t6						Insertion of a Suction Valve and Valve Box Fixing a Coupling Flange and a Shaft Together(High Torque)
				u6						Fixing the Rim of a Drive Gear and a Boss Together Attaching and Fixing a Bearing Bushing
				x6						

1.1 Generally Used Hole-basis System of Fits

Reference Hole	Class of Tolerance Range for Shafts																	
	Clearance Fit							Transition Fit			Interference Fit							
H6						g5	h5	js5	k5	m5								
					f6	g6	h6	js6	k6	m6	n6*	p6*						
H7					f6	g6	h6	js6	k6	m6	n6	p6*	r6*	s6	t6	u6	x6	
				e7	f7		h7	js7										
H8					f7		h7											
				e8	f8		h8											
			d9	e9														
H9			d8	e8			h8											
		c9	d9	e9			h9											
H10	b9	c9	d9															

[Note]* An exception may arise according to the dimensional sectioning scheme.

2.1 Generally Used Shaft-basis System of Fits

Reference Shaft	Class of Tolerance Range for Holes																	
	Clearance Fit						Transition Fit			Interference Fit								
h5							H6	JS6	K6	M6	N6*	P6						
h6						F6	G6	H6	JS6	K6	M6	N6	P6*					
						F7	G7	H7	JS7	K7	M7	N7	P7*	R7	S7	T7	U7	X7
h7					E7	F7		H7										
						F8		H8										
h8			D8	E8	F8			H8										
			D9	E9				H9										
h9			D8	E8				H8										
		C9	D9	E9				H9										
	B10	C10	D10															

[Note]* An exception may arise according to the dimensional sectioning scheme.

1.2 Interrelation among Tolerance Ranges for Generally Used Hole-basis System of Fits

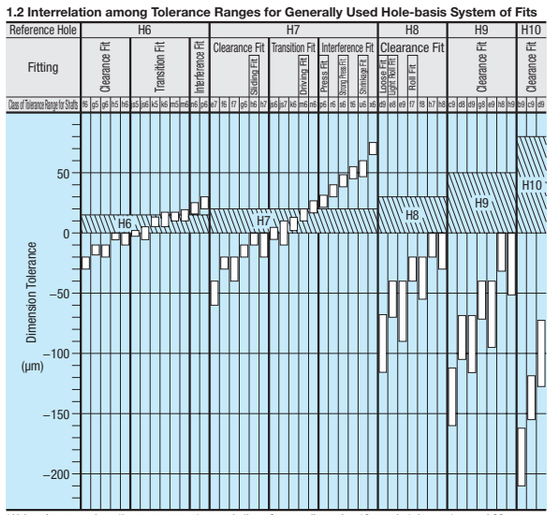

* Values in cases where the measurement exceeds the reference dimension 18 mm, but does not exceed 30 mm.

2.2 Interrelation among Tolerance Ranges for Generally Used Shaft-basis System of Fits

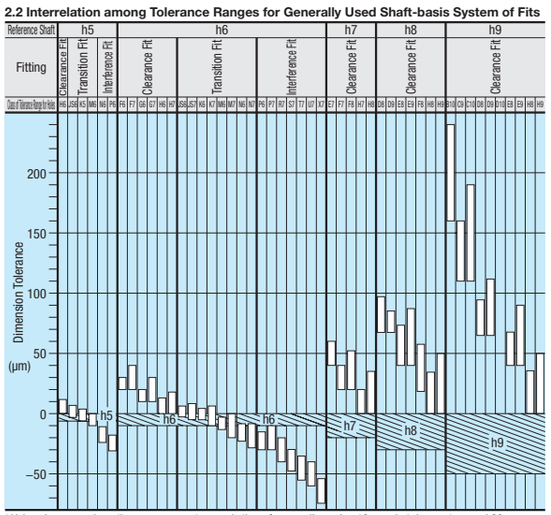

* Values in cases where the measurement exceeds the reference dimension 18 mm, but does not exceed 30 mm.

[Technical Data]
Dimension Tolerance for Regularly Used Fitting

Excerpted and edited from JIS B0401-2 (1998)

Dimension Tolerance for Generally Used Hole Fits

Reference Dimension (mm)		Class of Tolerance Range for Shafts																															Unit μm
More than	or Less	b9	c9	d8	d9	e7	e8	e9	f6	f7	f8	g5	g6	h5	h6	h7	h8	h9	js5	js6	js7	k5	k6	m5	m6	n5*	n6	p6	r6	s6	t6	u6	x6
–	3	−140 −165	−60 −85	−20 −34	−20 −45	−14 −24	−14 −28	−14 −39	−6 −12	−6 −16	−6 −20	−2 −6	−2 −8	0 −4	0 −6	0 −10	0 −14	0 −25	±2	±3	±5	+4 0	+6 0	+6 +2	+8 +2	+8 +4	+10 +4	+12 +6	+16 +10	+20 +14	–	+24 +18	+26 +20
3	6	−140 −170	−70 −100	−30 −48	−30 −60	−20 −32	−20 −38	−20 −50	−10 −18	−10 −22	−10 −28	−4 −9	−4 −12	0 −5	0 −8	0 −12	0 −18	0 −30	±2.5	±4	±6	+6 +1	+9 +1	+9 +4	+12 +4	+13 +8	+16 +8	+20 +12	+23 +15	+27 +19	–	+31 +23	+36 +28
6	10	−150 −186	−80 −116	−40 −62	−40 −76	−25 −40	−25 −47	−25 −61	−13 −22	−13 −28	−13 −35	−5 −11	−5 −14	0 −6	0 −9	0 −15	0 −22	0 −36	±3	±4.5	±7.5	+7 +1	+10 +1	+12 +6	+15 +6	+16 +10	+19 +10	+24 +15	+28 +19	+32 +23	–	+37 +28	+43 +34
10	14	−150 −193	−95 −138	−50 −77	−50 −93	−32 −50	−32 −59	−32 −75	−16 −27	−16 −34	−16 −43	−6 −14	−6 −17	0 −8	0 −11	0 −18	0 −27	0 −43	±4	±5.5	±9	+9 +1	+12 +1	+15 +7	+18 +7	+20 +12	+23 +12	+29 +18	+34 +23	+39 +28	–	+44 +33	+51 +40 +56 +45
14	18																																
18	24	−160 −212	−110 −162	−65 −98	−65 −117	−40 −61	−40 −73	−40 −92	−20 −33	−20 −41	−20 −53	−7 −16	−7 −20	0 −9	0 −13	0 −21	0 −33	0 −52	±4.5	±6.5	±10.5	+11 +2	+15 +2	+17 +8	+21 +8	+24 +15	+28 +15	+35 +22	+41 +28	+48 +35	– +54 +41	+54 +41 +61 +48	+67 +54 +77 +64
24	30																																
30	40	−170 −232	−120 −182	−80 −119	−80 −142	−50 −75	−50 −89	−50 −112	−25 −41	−25 −50	−25 −64	−9 −20	−9 −25	0 −11	0 −16	0 −25	0 −39	0 −62	±5.5	±8	±12.5	+13 +2	+18 +2	+20 +9	+25 +9	+28 +17	+33 +17	+42 +26	+50 +34	+59 +43	+64 +48 +70 +54	+76 +60 +86 +70	–
40	50	−180 −242	−130 −192																														
50	65	−190 −264	−140 −214	−100 −146	−100 −174	−60 −90	−60 −106	−60 −134	−30 −49	−30 −60	−30 −76	−10 −23	−10 −29	0 −13	0 −19	0 −30	0 −46	0 −74	±6.5	±9.5	±15	+15 +2	+21 +2	+24 +11	+30 +11	+33 +20	+39 +20	+51 +32	+60 +41 +62 +43	+72 +53 +78 +59	+85 +66 +94 +75	+106 +87 +121 +102	–
65	80	−200 −274	−150 −224																														
80	100	−220 −307	−170 −257	−120 −174	−120 −207	−72 −107	−72 −126	−72 −159	−36 −58	−36 −71	−36 −90	−12 −27	−12 −34	0 −15	0 −22	0 −35	0 −54	0 −87	±7.5	±11	±17.5	+18 +3	+25 +3	+28 +13	+35 +13	+38 +23	+45 +23	+59 +37	+73 +51 +76 +54	+93 +71 +101 +79	+113 +91 +126 +104	+146 +124 +166 +144	–
100	120	−240 −327	−180 −267																														
120	140	−260 −360	−200 −300	−145 −208	−145 −245	−85 −125	−85 −148	−85 −185	−43 −68	−43 −83	−43 −106	−14 −32	−14 −39	0 −18	0 −25	0 −40	0 −63	0 −100	±9	±12.5	±20	+21 +3	+28 +3	+33 +15	+40 +15	–	+52 +27	+68 +43	+88 +63 +90 +65 +93 +68	+117 +92 +125 +100 +133 +108	+147 +122 +159 +134 +171 +146	–	–
140	160	−280 −380	−210 −310																														
160	180	−310 −410	−230 −330																														
180	200	−340 −455	−240 −355	−170 −242	−170 −285	−100 −146	−100 −172	−100 −215	−50 −79	−50 −96	−50 −122	−15 −35	−15 −44	0 −20	0 −29	0 −46	0 −72	0 −115	±10	±14.5	±23	+24 +4	+33 +4	+37 +17	+46 +17	–	+60 +31	+79 +50	+106 +77 +109 +80 +113 +84	+151 +122 +159 +130 +169 +140	–	–	–
200	225	−380 −495	−260 −375																														
225	250	−420 −535	−280 −395																														
250	280	−480 −610	−300 −430	−190 −271	−190 −320	−110 −162	−110 −191	−110 −240	−56 −88	−56 −108	−56 −137	−17 −40	−17 −49	0 −23	0 −32	0 −52	0 −81	0 −130	±11.5	±16	±26	+27 +4	+36 +4	+43 +20	+52 +20	–	+66 +34	+88 +56	+126 +94 +130 +98	–	–	–	–
280	315	−540 −670	−330 −460																														
315	355	−600 −740	−360 −500	−210 −299	−210 −350	−125 −182	−125 −214	−125 −265	−62 −98	−62 −119	−62 −151	−18 −43	−18 −54	0 −25	0 −36	0 −57	0 −89	0 −140	±12.5	±18	±28.5	+29 +4	+40 +4	+46 +21	+57 +21	–	+73 +37	+98 +62	+144 +108 +150 +114	–	–	–	–
355	400	−680 −820	−400 −540																														
400	450	−760 −915	−440 −595	−230 −327	−230 −385	−135 −198	−135 −232	−135 −290	−68 −108	−68 −131	−68 −165	−20 −47	−20 −60	0 −27	0 −40	0 −63	0 −97	0 −155	±13.5	±20	±31.5	+32 +5	+45 +5	+50 +23	+63 +23	–	+80 +40	+108 +68	+166 +126 +172 +132	–	–	–	–
450	500	−840 −995	−480 −635																														

Dimension Tolerance for Generally Used Shaft Fits

Reference Dimension (mm)		Class of Tolerance Range for Holes																															Unit μm
More than	or Less	B10	C9	C10	D8	D9	D10	E7	E8	E9	F6	F7	F8	G6	G7	H6	H7	H8	H9	H10	JS6	JS7	K6	K7	M6	M7	N6	N7	P6	P7	R7	S7	T7	U7	X7
–	3	+180 +140	+85 +60	+100 +60	+34 +20	+45 +20	+60 +20	+24 +14	+28 +14	+39 +14	+12 +6	+16 +6	+20 +2	+8 +2	+12 +2	+6 0	+10 0	+14 0	+25 0	+40 0	±3	±5	0 −6	0 −10	−2 −8	−2 −12	−4 −10	−4 −14	−6 −12	−6 −16	−10 −20	−14 −24	–	−18 −28	−20 −30
3	6	+188 +140	+100 +70	+118 +70	+48 +30	+60 +30	+78 +30	+32 +20	+38 +20	+50 +20	+18 +10	+22 +10	+28 +10	+12 +4	+16 +4	+8 0	+12 0	+18 0	+30 0	+48 0	±4	±6	+2 −6	+3 −9	−1 −9	0 −12	−5 −13	−4 −16	−9 −17	−8 −20	−11 −23	−15 −27	–	−19 −31	−24 −36
6	10	+208 +150	+116 +80	+138 +80	+62 +40	+76 +40	+98 +40	+40 +25	+47 +25	+61 +25	+22 +13	+28 +13	+35 +13	+14 +5	+20 +5	+9 0	+15 0	+22 0	+36 0	+58 0	±4.5	±7.5	+2 −7	+5 −10	−3 −12	0 −15	−7 −16	−4 −19	−12 −21	−9 −24	−13 −28	−17 −32	–	−22 −37	−28 −43
10	14	+220 +150	+138 +95	+165 +95	+77 +50	+93 +50	+120 +50	+50 +32	+59 +32	+75 +32	+27 +16	+34 +16	+43 +16	+17 +6	+24 +6	+11 0	+18 0	+27 0	+43 0	+70 0	±5.5	±9	+2 −9	+6 −12	−4 −15	0 −18	−9 −20	−5 −23	−15 −26	−11 −29	−16 −34	−21 −39	–	−26 −44	−33 −51 −38 −56
14	18																																		
18	24	+244 +160	+162 +110	+194 +110	+98 +65	+117 +65	+149 +65	+61 +40	+73 +40	+92 +40	+33 +20	+41 +20	+53 +20	+20 +7	+28 +7	+13 0	+21 0	+33 0	+52 0	+84 0	±6.5	±10.5	+2 −11	+6 −15	−4 −17	0 −21	−11 −24	−7 −28	−18 −31	−14 −35	−20 −41	−27 −48	– −33 −54	−33 −54 −40 −61	−46 −67 −56 −77
24	30																																		
30	40	+270 +170	+182 +120	+220 +120	+119 +80	+142 +80	+180 +80	+75 +50	+89 +50	+112 +50	+41 +25	+50 +25	+64 +25	+25 +9	+34 +9	+16 0	+25 0	+39 0	+62 0	+100 0	±8	±12.5	+3 −13	+7 −18	−4 −20	0 −25	−12 −28	−8 −33	−21 −37	−17 −42	−25 −50	−34 −59	−39 −64 −45 −70	−51 −76 −61 −86	–
40	50	+280 +180	+192 +130	+230 +130																													
50	65	+310 +190	+214 +140	+260 +140	+146 +100	+174 +100	+220 +100	+90 +60	+106 +60	+134 +60	+49 +30	+60 +30	+76 +30	+29 +10	+40 +10	+19 0	+30 0	+46 0	+74 0	+120 0	±9.5	±15	+4 −15	+9 −21	−5 −24	0 −30	−14 −33	−9 −39	−26 −45	−21 −51	−30 −60 −32 −62	−42 −72 −48 −78	−55 −85 −64 −94	−76 −106 −91 −121	–
65	80	+320 +200	+224 +150	+270 +150																													
80	100	+360 +220	+257 +170	+310 +170	+174 +120	+207 +120	+260 +120	+107 +72	+126 +72	+159 +72	+58 +36	+71 +36	+90 +36	+34 +12	+47 +12	+22 0	+35 0	+54 0	+87 0	+140 0	±11	±17.5	+4 −18	+10 −25	−6 −28	0 −35	−16 −38	−10 −45	−30 −52	−24 −59	−38 −73 −41 −76	−58 −93 −66 −101	−78 −113 −91 −126	−111 −146 −131 −166	–
100	120	+380 +240	+267 +180	+320 +180																													
120	140	+420 +260	+300 +200	+360 +200	+208 +145	+245 +145	+305 +145	+125 +85	+148 +85	+185 +85	+68 +43	+83 +43	+106 +43	+39 +14	+54 +14	+25 0	+40 0	+63 0	+100 0	+160 0	±12.5	±20	+4 −21	+12 −28	−8 −33	0 −40	−20 −45	−12 −52	−36 −61	−28 −68	−48 −88 −50 −90 −53 −93	−77 −117 −85 −125 −93 −133	−107 −147 −119 −159 −131 −171	–	–
140	160	+440 +280	+310 +210	+370 +210																													
160	180	+470 +310	+330 +230	+390 +230																													
180	200	+525 +340	+355 +240	+425 +240	+242 +170	+285 +170	+355 +170	+146 +100	+172 +100	+215 +100	+79 +50	+96 +50	+122 +50	+44 +15	+61 +15	+29 0	+46 0	+72 0	+115 0	+185 0	±14.5	±23	+5 −24	+13 −33	−8 −37	0 −46	−22 −51	−14 −60	−41 −70	−33 −79	−60 −106 −63 −109 −67 −113	−105 −151 −113 −159 −123 −169	–	–	–
200	225	+565 +380	+375 +260	+445 +260																													
225	250	+605 +420	+395 +280	+465 +280																													
250	280	+690 +480	+430 +300	+510 +300	+271 +190	+320 +190	+400 +190	+162 +110	+191 +110	+240 +110	+88 +56	+108 +56	+137 +56	+49 +17	+69 +17	+32 0	+52 0	+81 0	+130 0	+210 0	±16	±26	+5 −27	+16 −36	−9 −41	0 −52	−25 −57	−14 −66	−47 −79	−36 −88	−74 −126 −78 −130	–	–	–	–
280	315	+750 +540	+460 +330	+540 +330																													
315	355	+830 +600	+500 +360	+590 +360	+299 +210	+350 +210	+440 +210	+182 +125	+214 +125	+265 +125	+98 +62	+119 +62	+151 +62	+54 +18	+75 +18	+36 0	+57 0	+89 0	+140 0	+230 0	±18	±28.5	+7 −29	+17 −40	−10 −46	0 −57	−26 −62	−16 −73	−51 −87	−41 −98	−87 −144 −93 −150	–	–	–	–
355	400	+910 +680	+540 +400	+630 +400																													
400	450	+1010 +760	+595 +440	+690 +440	+327 +230	+385 +230	+480 +230	+198 +135	+232 +135	+290 +135	+108 +68	+131 +68	+165 +68	+60 +20	+83 +20	+40 0	+63 0	+97 0	+155 0	+250 0	±20	±31.5	+8 −32	+18 −45	−10 −50	0 −63	−27 −67	−17 −80	−55 −95	−45 −108	−103 −166 −109 −172	–	–	–	–
450	500	+1090 +840	+635 +480	+730 +480																													

Reference In each column, the upper value is the upper dimensional tolerance, and the lower figure is the lower one. [Note]*:n5 is the previous version of JIS. Presented here because many MISUMI products conform to this version.